


QuickJack TSB 121-052023

This Technical Service Bulletin provides a procedure to remove and replace the short user handle provided on some QuickJack Power Units (5585360). This TSB is accompanied with a replacement handle.

⚠ DANGER Before performing this procedure, verify that electrical power has been removed from the unit and there is no possibility of re-energizing the unit.

To remove and replace the power unit handle:

1. Refer to the figure below. Remove the two socket head cap screws securing the handle to the power unit using a 5 mm hex key.
2. Remove and discard the short handle.
3. Position the longer handle onto the power unit.
4. Secure the long handle onto the power unit using the two socket head cap screws.

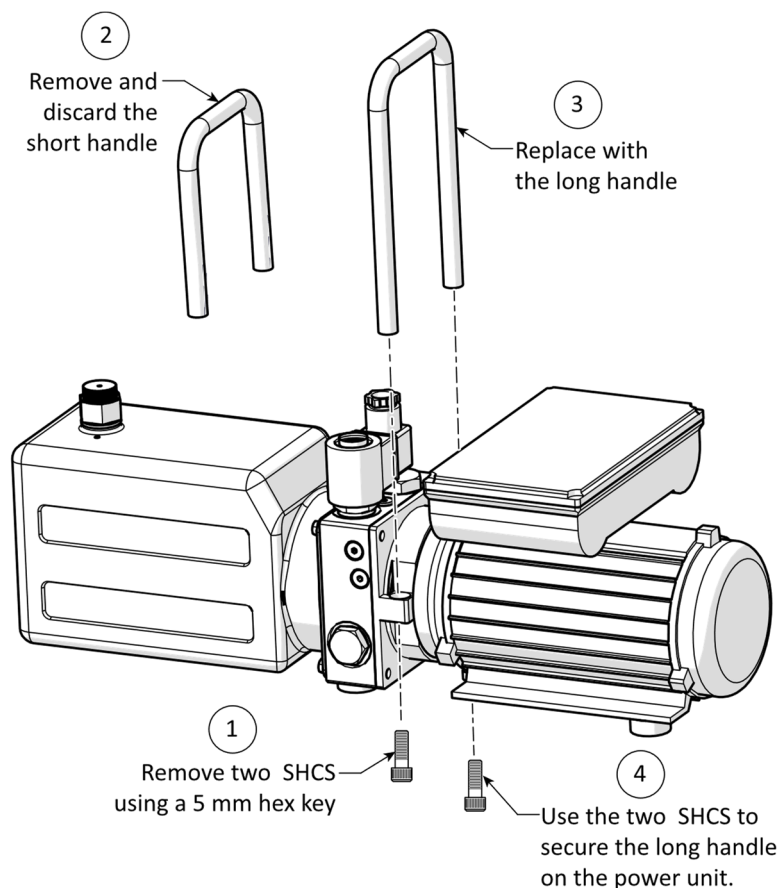

If you continue to experience difficulties with your QuickJack that you cannot resolve, please contact QuickJack Technical Support at support@quickjack.com, (888) 262-3880, or (805) 933-9970.